HYUNDAI
POWER EQUIPMENT

HCP3550

Portable Gasoline Generator

User Manual

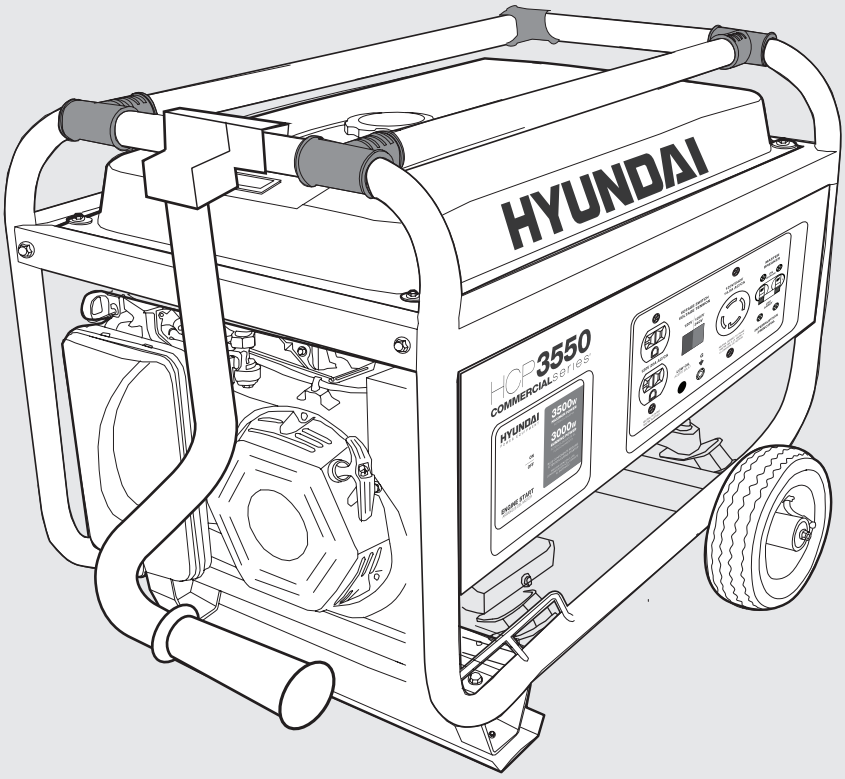

COMMERCIAL series®

HYUNDAI

POWER EQUIPMENT

©2013 Hyundai Power Equipment. All Rights Reserved.
Licensed by Hyundai Corporation, Korea.

HCP3550-1212-02

COMMERCIAL
series®

Thank you for purchasing this Hyundai Power Equipment Generator.
Please register this product in order to ensure warranty service in the future.

This manual covers the safety, operation and maintenance procedures for the HCP3550.

All information in this publication is based on the latest product information available at the time of print.
Visit www.powerbyhyundai.com for manual updates and operation notices.

No part of this publication may be reproduced without written permission. Please keep this manual together with the Owners Card. Contact Hyundai Power Equipment at the numbers listed on the Owners Card if warranty service is required.

It is important that anyone operating this product read and understand the manual prior to use.

Warranty Information

Warranty service, operation assistance and product support is provided by Midland International Inc., a licensed manufacturer of Hyundai Power Equipment.

www.powerbyhyundai.com

TECHNICAL ASSISTANCE

1-877-528-3772 (toll-free)

CUSTOMER SERVICE

1-877-528-3772 (toll-free)

SALES

1-503-534-3684

Component Certifications

This product contains components certified by the following agency:

EPA

TABLE OF CONTENTS

1.0 - OPERATION SAFETY

- 1.1 - Operation Safety 8
- 1.2 - AC Safety Guidelines 9
- 1.3 - Maintenance Safety 9
- 1.4 - Other Safety Hazards 10

2.0 - COMPONENTS

- 2.1 - Identification 11

3.0 - PRE-OPERATION INSPECTION

- 3.1 - Engine Oil Check 14
- 3.2 - Fuel Level Check 15
- 3.3 - Air Filter Check 16

4.0 - OPERATION

- 4.1 - Mounting Instructions 17
- 4.2 - Starting the Generator 19
- 4.3 - Using the Generator 21
- 4.4 - Stopping the Generator 21

5.0 - MAINTENANCE

- 5.1 - Importance of Maintenance 22
- 5.2 - Maintenance Schedule 22
- 5.3 - General Inspection 23
- 5.4 - Air Filter Service 23
- 5.5 - Oil Maintenance 24
- 5.6 - Spark Plug Service 25
- 5.7 - Handling and Storage 26

6.0 - TROUBLESHOOTING 27

7.0 - SPECIFICATIONS 28

8.0 - WIRING DIAGRAMS 29

WARRANTY 30

SAFETY

1.1 - Operation Safety

- Always perform a pre-operation check before starting the engine.
- Properly clean and maintain the equipment.
- Operate the generator according to instructions for safe and dependable service.
- Read user manual carefully before operating this product! Failure to do so may result in serious harm to the user and to the equipment.
- Before operating the generator, read the user manual carefully. Otherwise, it may result in personal injuries or equipment damage.
- Never run the generator in an enclosed area to avoid harm from exhaust emissions of a poisonous carbon monoxide gas.
- Be careful not to touch the exhaust system, compressor pump or discharge tubing during operation due to risk of burns.
- Pay attention to the warning labels. The engine exhaust system will become heated during operation and remain hot immediately after the engine is stopped.
- Gasoline is a highly flammable and explosive liquid. Refuel in a well ventilated area with the engine stopped.
- When refueling the generator, keep it away from cigarettes, open flames, smoke and/or sparks.
- Connections for standby power to a building's electrical system must be done by a qualified electrician and must comply with all applicable laws and electrical codes. Improper connections may cause serious injuries to electrical workers during a power outage, and when the utility power is restored, the generator may explode or cause fires.
- Place the generator at least 3 feet away from buildings or other equipment during operation.
- Run the generator on a level surface. Tilting the generator may result in fuel spills.

- Know how to stop the generator quickly and understand operation of all the controls. Never permit anyone to operate the generator without proper instructions.
- Keep children, pets and machinery with rotating parts away during operation.
- Do not operate the generator in rain or snow.
- Do not allow any moisture to come in contact with the generator.
- Do not touch the spark plug while the engine is operating or shortly after the engine has been shut down

1.2 - AC Safety Guidelines

Before connecting the generator to an electrical device or power cord:

- Make sure that everything is in proper working order. Faulty devices or power cords can lead to an electrical shock.
- Turn off the generator immediately if the device begins to operate abnormally. Then disconnect the device and investigate the problem.
- Make sure that the electrical rating of the device does not exceed that of the generator. If the power level of the device is between the maximum output power and the running power of the generator, the generator should not be used for more than 30 minutes.
- The connections from the generator to the household power supply should be done by professional electrical technicians. Improper connections may lead to a fire hazard or damages to the generator set.

1.3 - Maintenance Safety

- After any maintenance is performed, wash immediately using soap and clean water because repeated exposure to lubricant may cause skin irritation.
- Do not clean the filter element with flammable liquids like gasoline because an explosion may occur.
- Turn off the engine before performing any maintenance. Otherwise it can cause severe personal injury or death.

- Allow the generator set to cool down before performing any maintenance.
- Always wear safety glasses when cleaning the generator set with air.
- Do not clean the generator set with a pressure washer because it can cause damage to the generator set.
- Before working with batteries, ventilate the area, wear safety glasses, do not smoke and always disconnect the negative cable first and reconnect it last.
- Use rubber gloves when coming into contact with engine oil.
- Always stop the generator set before removing the oil filler cap.
- Only qualified maintenance personnel with knowledge of fuels, electricity, and machinery hazards should perform maintenance procedures.

1.4 - Other Safety Hazards

- To avoid breathing in poisonous carbon monoxide from the exhaust gases, adequate ventilation should be provided if the generator set is running in a partially enclosed space.
- If the generator set is stored outdoors, check all the electrical components on the control panel before each use. Moisture can damage the generator and can lead to an electric shock.

2.0 - COMPONENTS

2.1 - Identification of Components

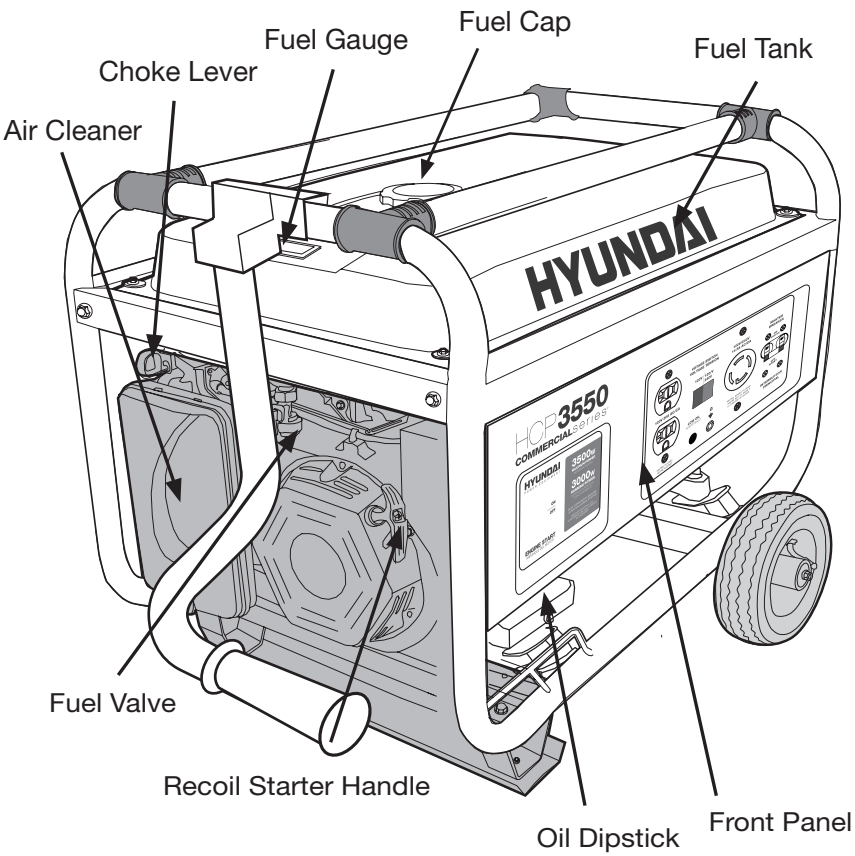

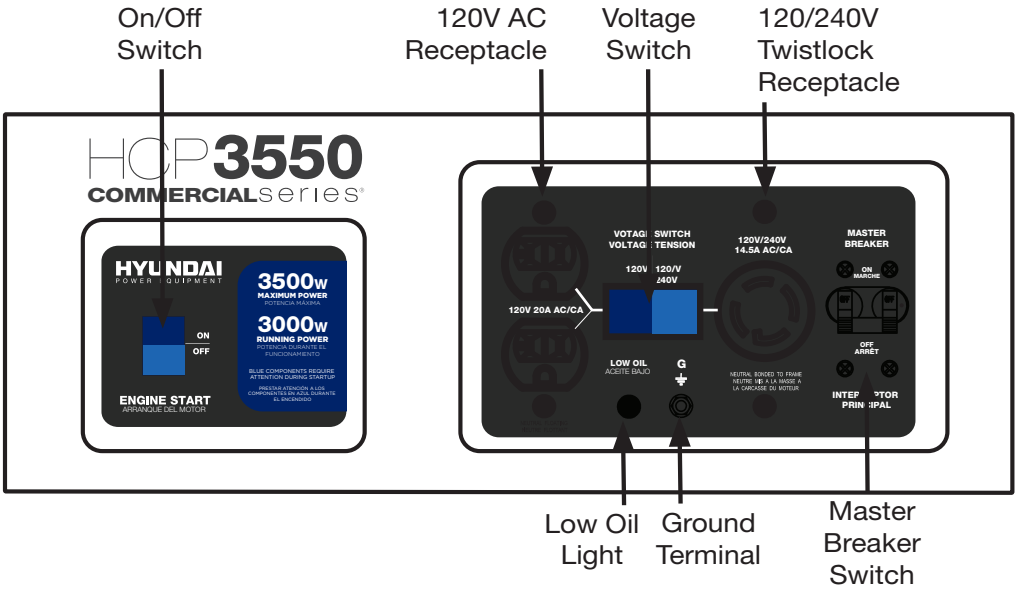
On/Off Switch
120V AC Receptacle
Voltage Switch
120/240V Twistlock Receptacle
HCP3550
COMMERCIALseries
HYUNDAI
POWER EQUIPMENT
3500w
MAXIMUM POWER
POTENCIA MÁXIMA
3000w
RUNNING POWER
POTENCIA DURANTE EL FUNCIONAMIENTO
ON
OFF
ENGINE START
ARRANQUE DEL MOTOR
VOLTAGE SWITCH
120V 120/240V
120V 20A AC/CA
120V/240V 14.5A AC/CA
MASTER BREAKER
ON MARCHE
OFF ARRET
LOW OIL
ACEITE BAJO
Low Oil Light
Ground Terminal
Master Breaker Switch

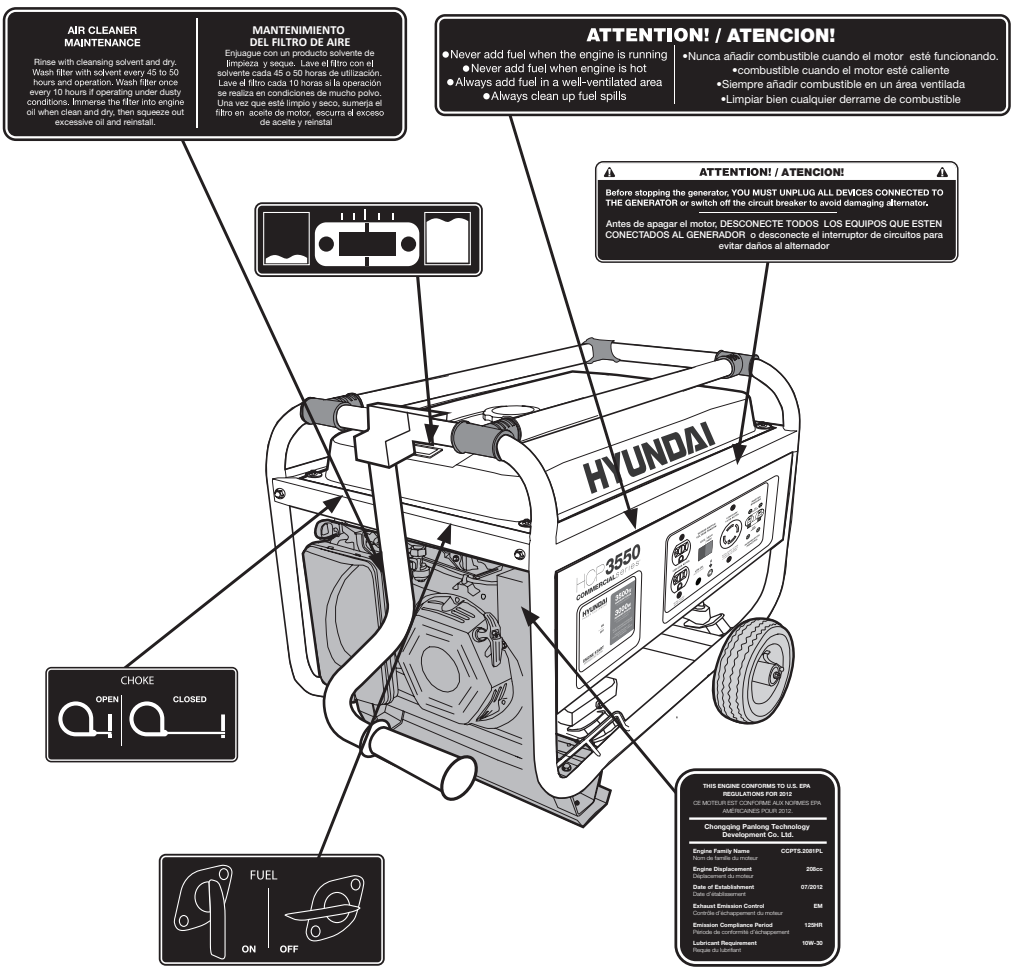
AIR CLEANER MAINTENANCE
Rinse with cleansing solvent and dry. Wash filter with solvent every 45 to 50 hours and operation. Wash filter once every 10 hours if operating under dusty conditions. Immerse the filter into engine oil when clean and dry, then squeeze out excessive oil and reinstall.
MANTENIMIENTO DEL FILTRO DE AIRE
Enjuague con un producto solvente de limpieza y seque. Lave el filtro con el solvente cada 45 o 50 horas de utilización. Lave el filtro cada 10 horas si la operación se realiza en condiciones de mucho polvo. Una vez que esté limpio y seco, sumerja el filtro en aceite de motor, escurra el exceso de aceite y reinstal
ATTENTION! / ATENCION!
●Never add fuel when the engine is running
●Never add fuel when engine is hot
●Always add fuel in a well-ventilated area
●Always clean up fuel spills
•Nunca añadir combustible cuando el motor esté funcionando.
•combustible cuando el motor esté caliente
•Siempre añadir combustible en un área ventilada
•Limpiar bien cualquier derrame de combustible
ATTENTION! / ATENCION!
Before stopping the generator, YOU MUST UNPLUG ALL DEVICES CONNECTED TO THE GENERATOR or switch off the circuit breaker to avoid damaging alternator.
Antes de apagar el motor, DESCONECTE TODOS LOS EQUIPOS QUE ESTEN CONECTADOS AL GENERADOR o desconecte el interruptor de circuitos para evitar daños al alternador
HYUNDAI
CHOKE
OPEN
CLOSED
FUEL
ON
OFF
THIS ENGINE CONFORMS TO U.S. EPA REGULATIONS FOR 2012
CE MOTEUR EST CONFORME AUX NORMES EPA AMÉRICAINES POUR 2012.
Chongqing Panlong Technology Development Co. Ltd.
Engine Family Name CCPTS.208IPL
Engine Displacement 208cc
Date of Establishment 07/2012
Exhaust Emission Control EM
Emission Compliance Period 125HR
Lubricant Requirement 10W-30

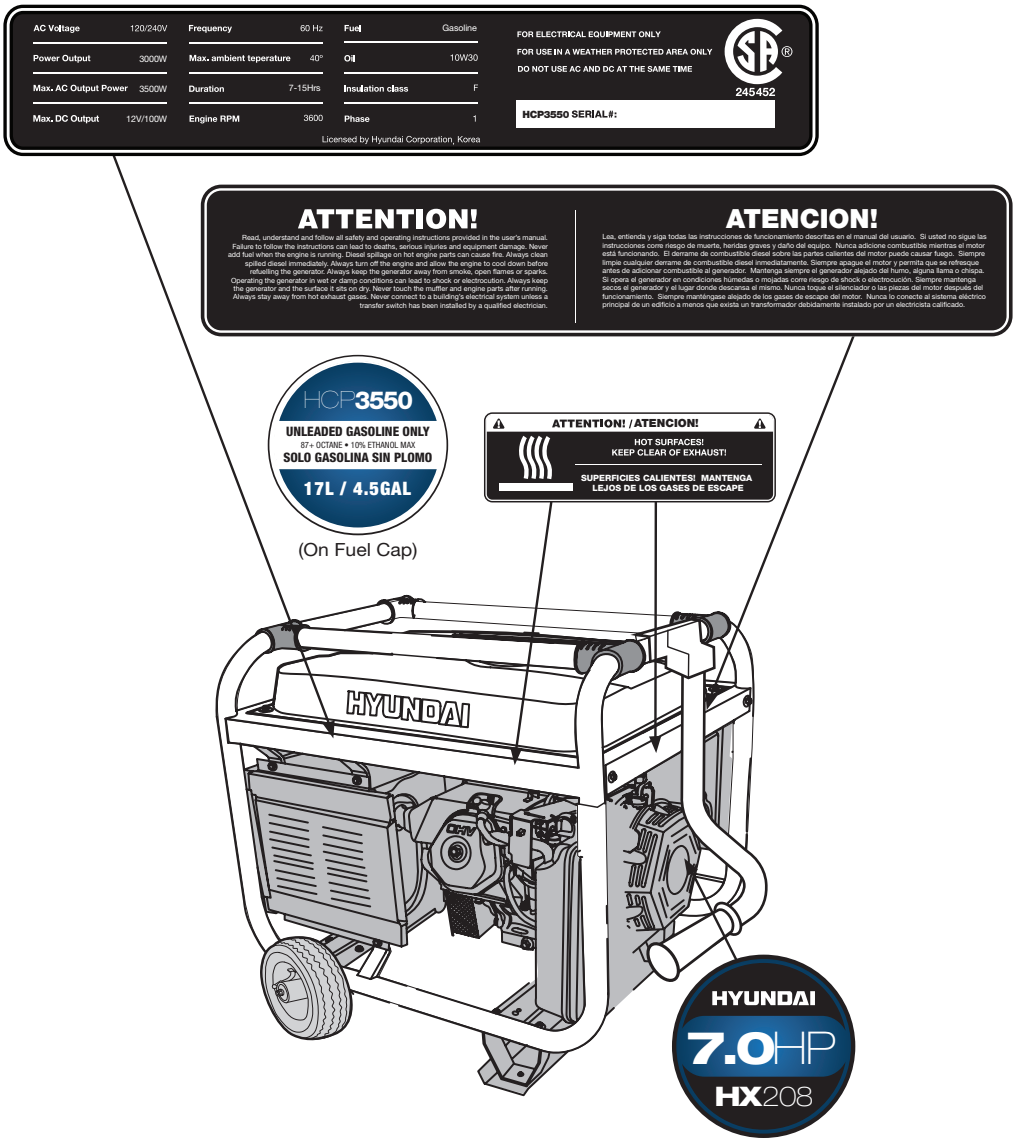
AC Voltage 120/240V
Frequency 60 Hz
Fuel Gasoline
Power Output 3000W
Max. ambient teperature 40°
Oil 10W30
Max. AC Output Power 3500W
Duration 7-15Hrs
Insulation class F
Max. DC Output 12V/100W
Engine RPM 3600
Phase 1
Licensed by Hyundai Corporation, Korea
FOR ELECTRICAL EQUIPMENT ONLY
FOR USE IN A WEATHER PROTECTED AREA ONLY
DO NOT USE AC AND DC AT THE SAME TIME
245452
HCP3550 SERIAL#:
ATTENTION!
Read, understand and follow all safety and operating instructions provided in the user's manual. Failure to follow the instructions can lead to deaths, serious injuries and equipment damage. Never add fuel when the engine is running. Diesel spillage on hot engine parts can cause fire. Always clean spilled diesel immediately. Always turn off the engine and allow the engine to cool down before refuelling the generator. Always keep the generator away from smoke, open flames or sparks. Operating the generator in wet or damp conditions can lead to shock or electrocution. Always keep the generator and the surface it sits on dry. Never touch the muffler and engine parts after running. Always stay away from hot exhaust gases. Never connect to a building's electrical system unless a transfer switch has been installed by a qualified electrician.
ATENCION!
Lea, entienda y siga todas las instrucciones de funcionamiento descritas en el manual del usuario. Si usted no sigue las instrucciones corre riesgo de muerte, heridas graves y daño del equipo. Nunca adicione combustible mientras el motor está funcionando. El derrame de combustible diesel sobre las partes calientes del motor puede causar fuego. Siempre limpie cualquier derrame de combustible diesel inmediatamente. Siempre apague el motor y permita que se refresque antes de adicionar combustible al generador. Mantenga siempre el generador alejado del humo, alguna llama o chispa. Si opera el generador en condiciones húmedas o mojadas corre riesgo de shock o electrocución. Siempre mantenga secos el generador y el lugar donde descansa el mismo. Nunca toque el silenciador o las piezas del motor despuès del funcionamiento. Siempre manténgase alejado de los gases de escape del motor. Nunca lo conecte al sistema eléctrico principal de un edificio a menos que exista un transformador debidamente instalado por un electricista calificado.
HCP3550
UNLEADED GASOLINE ONLY
87+ OCTANE • 10% ETHANOL MAX
SOLO GASOLINA SIN PLOMO
17L / 4.5GAL
ATTENTION! / ATENCION!
HOT SURFACES!
KEEP CLEAR OF EXHAUST!
SUPERFICIES CALIENTES! MANTENGA LEJOS DE LOS GASES DE ESCAPE
HYUNDAI
HYUNDAI
7.0HP
HX208

(On Fuel Cap)

(Centred on Top of Tank)

WARNING/ADVERTENCIA

CHECK THE OIL LEVEL IF THE ENGINE STOPS OR IF THE LOW OIL LEVEL WARNING LIGHT IS ON.

VERIFIQUE EL NIVEL DE ACEITE SI EL MOTOR DEJA DE FUNCIONAR O SI EL INDICADOR DE NIVEL BAJO DE ACEITE SE MANTIENE ENCENDIDO

WARNING! / ADVERTENCIA!

- NEVER USE INSIDE A HOME OR GARAGE, EVEN IF DOORS AND WINDOWS ARE OPEN
- ALWAYS USE OUTDOORS AND FAR WAY FROM WINDOWS, DOORS AND VENTS

•NO USAR NUNCA DENTRO DE LA CASA O EL GARAJE, AUN CUANDO LAS PUERTAS Y VENTANAS ESTEN ABIERTAS
•UTILIZAR SIEMPRE EN EXTERIORES Y BIEN ALEJADO• DE VENTANAS, PUERTAS Y SALIDAS DE AIRE

3.0 Pre-Operation Inspection

Exhaust gas contains poisonous carbon monoxide. Never run the generator in an enclosed area. Be sure to provide adequate ventilation. Operate the generator on a level surface. If the generator is tilted, fuel spillage may result. Keep away from rotating parts while the generator is running. The generator is air-cooled and may be damaged if ventilation is inadequate.

3.1 - Engine Oil Check

1. Ensure the generator is on a level surface.
2. Inspect engine oil:

- Take out the oil filler cap and clean the dipstick.
- Check the oil level by reinserting the oil filler cap without rotating it. Remove the oil filler cap and examine the oil level. If the oil level is at or below the lower level, refill the oil to the upper limit mark. (10W30) Reinsert the oil filler cap and tighten securely. (Refer to figure)

Engine oil is a major factor affecting engine performance and service life. Non-detergent or vegetable oils are not recommended.

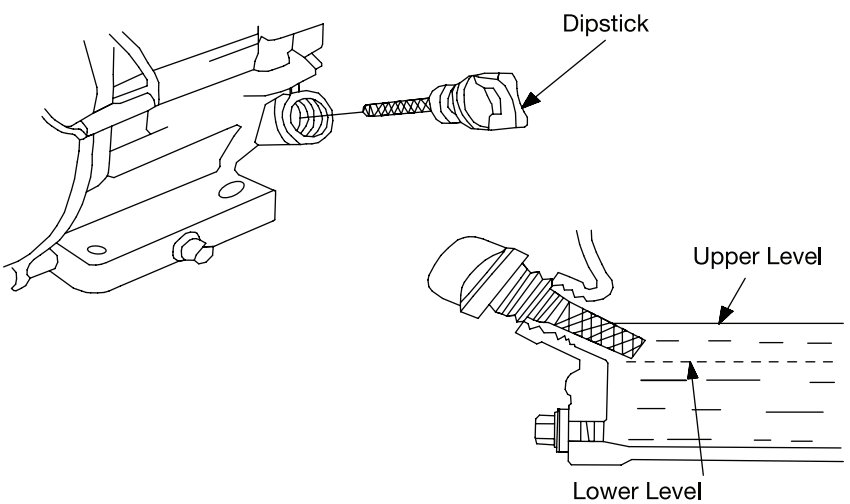

3.2 - Fuel Level Check

1. Check the fuel level by reading the gauge or removing the fuel tank cap to visually check the level.
2. Refuel if level is too low. Tighten the fuel tank cap securely after refilling (Refer to Figure)

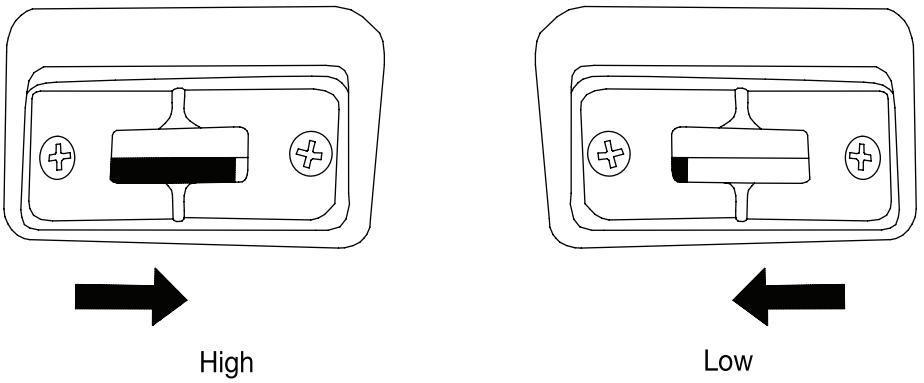

Gasoline is highly flammable and explosive under certain conditions. Refuel in a well-ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the generator is being refueled or where gasoline is stored. Do not overfill the tank. Be careful not to spill fuel when refueling. Wipe up any spilled gasoline and let the area dry before starting the engine.

Gasoline substitutes such as gasohol are not recommended. They may be harmful to the fuel system components

3.3 - Check the Air Filter

1. Loosen the knob and remove the air filter cover. Remove the air filter element and observe for cleanliness.
2. Clean the air filter element with soap and water or solvent. Squeeze dry and then soak in clean engine oil.
3. Squeeze out all excess oil and reinstall. Replace the element if it is damaged.

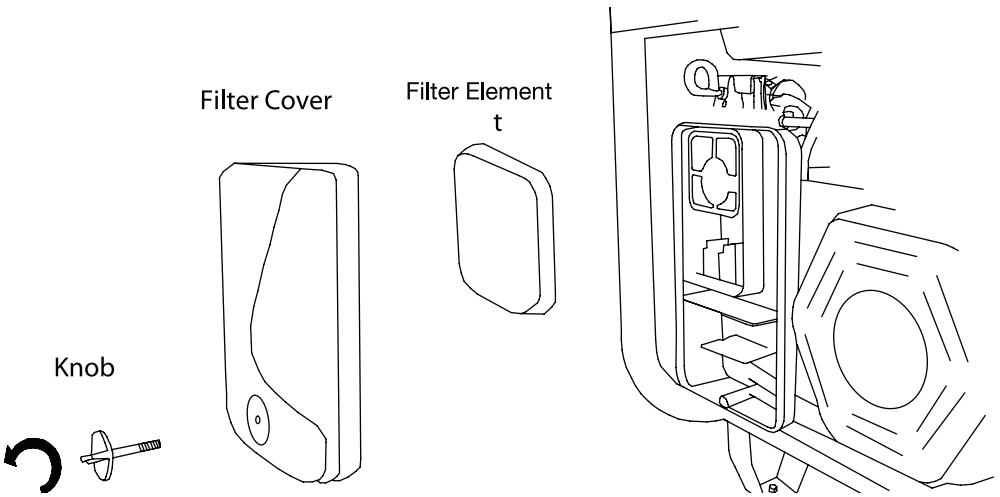

Check the air filter using the maintenance schedule. Always inspect air filter before using the generator. Clean Air Filter every 3 months or after 50hrs of operation according Section 5.4: Air Filter Service procedure.

4.0 - OPERATION

4.1 - Mounting Instructions

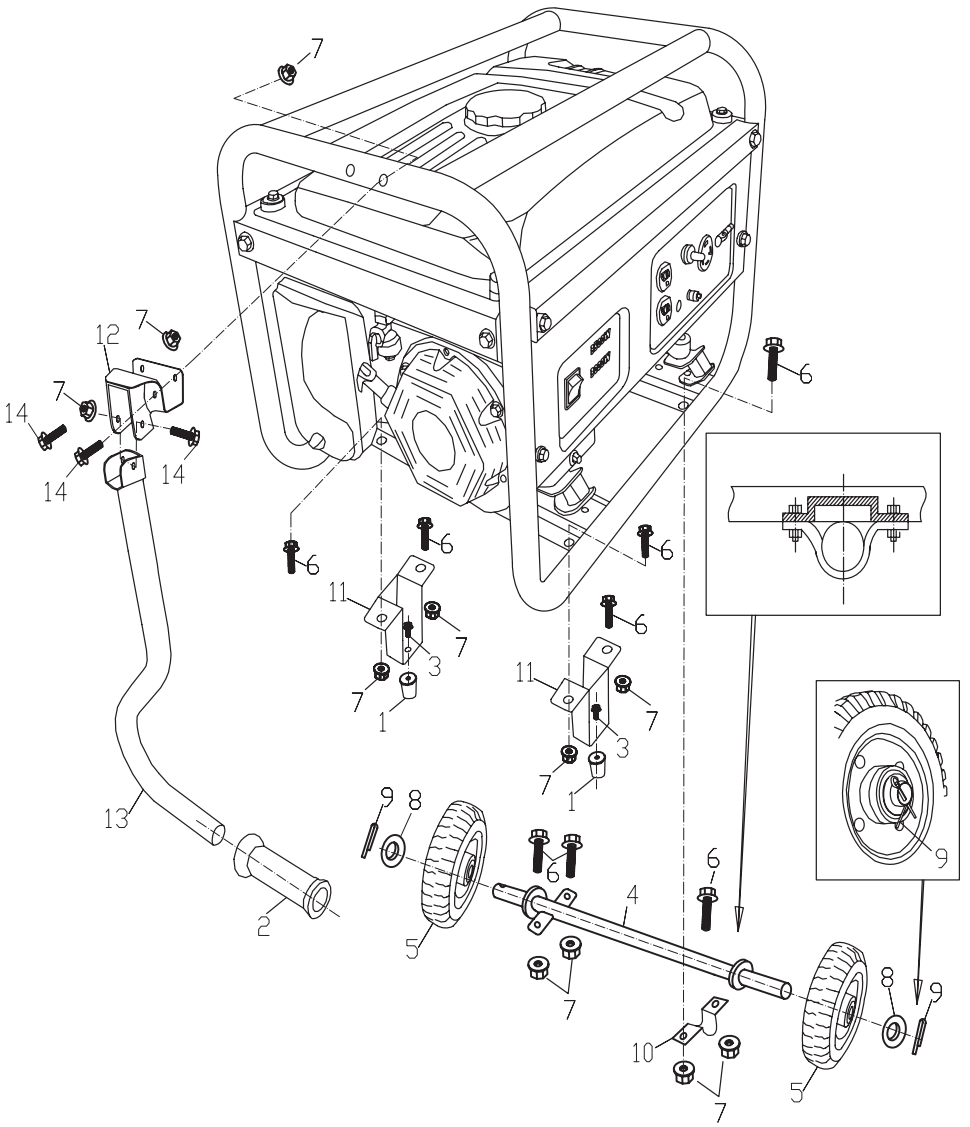

NUMBER	PART NAME	QUANTITY
1	Rubber Feet	2
2	Rubber Handle	1
3	Bolt M6 x 10	2
4	Wheel Axle	1
5	Wheel	2
6	Bolt M8 x 16	8
7	Nut M8	11
8	Washer	2
9	Cotter Pin	2
10	Axle Holder	1
11	Stand	2
12	Connecting Block	1
13	Handle	1
14	Bolt M8 x 45	3

INSTALLATION INSTRUCTIONS

1. Attach the handle bar to the upper frame of the generator. Tighten the bolts (14) and nuts (7) to the upper frame of the generator.
2. Attach the two peg stands to the bottom of the frame of the generator Tighten the two bolts (6) and two nuts (7) to the lower frame of the generator.
3. Place the two wheels (5) on the wheel axle (4) and then secure the wheels using the washer (8) and cotter pin (9) to the wheel axle (4).
4. Attach the wheel axle (4) to the bottom of the generator frame. Align the bolts (6) with the holes on the bottom of the generator and fasten tightly with the nuts (7) provided. Refer to the figure.

4.2 - Starting the Generator Set

GROUND TERMINAL

Before using generator, a ground wire must be connected to the ground terminal. The Ground terminal is located on the Front Panel. Before using the ground terminal consult a qualified electrician.

Ground Terminal Symbol:

The HCP3550 generator can be started using three methods.

- Recoil Start Method

RECOIL START METHOD

1. Rotate the fuel valve lever to ON position (Vertical position).

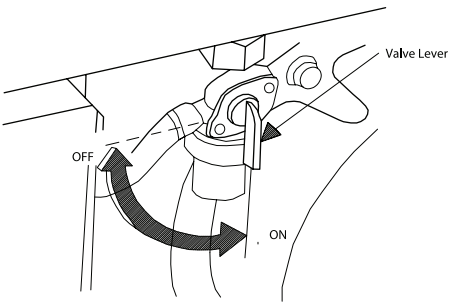

2. If the engine is cold: Pull the choke lever oto the closed position

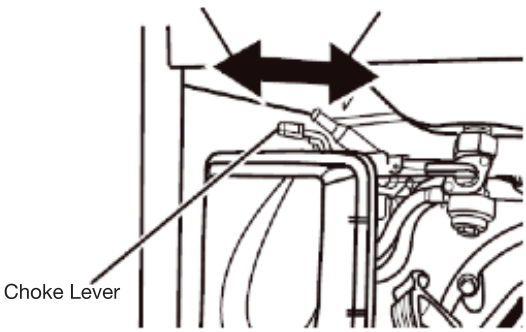

3. Disconnect all devices from the outlets on the generator panel.
4. Press the engine switch to the “ON” position.

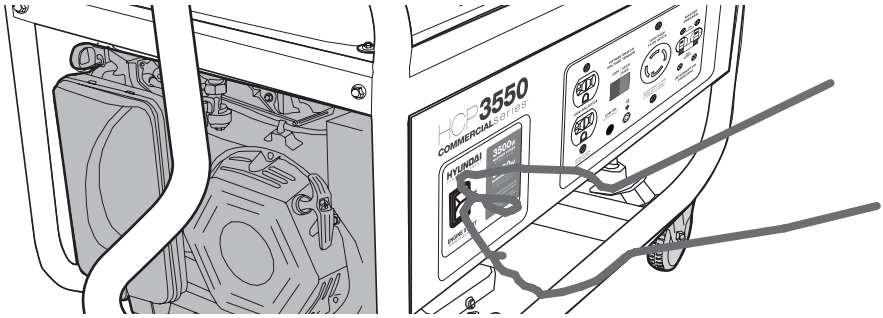

5. Grasp the recoil starter handle and pull it until the engine starts.

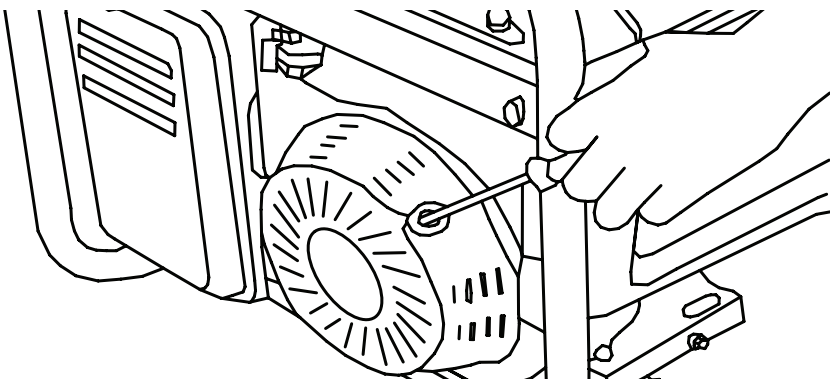

Do not allow the recoil starter to snap back. Return it slowly by hand

6. Push the choke lever to the OPEN position as the engine warms up. The choke is used to provide the proper mixture when the engine is cold.
   It can be opened and closed by operating the choke lever manually by moving the lever to the closed position to enrich the mixture for cold starting.
7. Let the engine run for several minutes before pluggin g in any devices.
   Using the generator while cold could damage both the generator and the appliance.

4.3 - Using the Generator Set

1. Turn off the switches of the device before connecting to the generator.
2. Start the generator according to section 4.3
3. Insert the plug of the device into the receptacle based on the voltage requirement of the device.
4. Lift the Master Breaker switch to ON position and turn on the device.

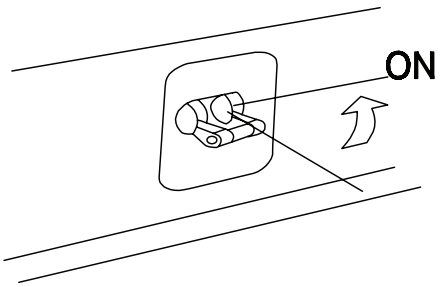

To stop the engine in an emergency turn the engine switch "OFF".

In order to maintain generator's performance:

- Always connect the generator to the ground terminal to prevent electrical shock.
- Add the watt ratings of all the loads that the generator set will be powering at the same time. Make sure that total wattage will not exceed the generator rating.

EXAMPLE:

A generator set rated 5000W can power two 1500W heaters, a 900W circular saw, a 500W drill and a 100W light at the same time (4500W combined). However, to operate a second 900W saw, it will be necessary to disconnect one of the 1500 W heaters.

4.4 Stopping the Generator Set

1. Turn off all the connected devices.
2. Allow the generator set run for a few minutes to cool down.
3. Stop the generator set by pressing and holding the engine switch in the OFF position until the generator set stops.
4. Rotate the fuel valve lever back to the OFF position (horizontal position).

5.0 - MAINTENANCE

5.1 - Importance of Maintenance

Proper maintenance ensures safe, economical and trouble-free operation. Improper maintenance may cause the generator to malfunction and can lead to serious injuries. Contact Hyundai Power Customer Support if you have any maintenance questions.

5.2 - Maintenance Schedule

ITEM	TASK	DAILY	EVERY 20 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 300 HOURS
General Inspection		●				
Engine Lubricants	Inspect Oil Level	●				
	Replace		●		●	
Air Filter	Inspection	●				
	Cleaning			●		
Sediment Cup	Cleaning			●		
Spark Plug	Inspection & Cleaning				●	
	Replacement					●
Valve Clearance	Inspection & Adjusting					●
Combustion Chamber	Inspection & Adjusting					●
Fuel Tank and Strainer	Cleaning					●
Fuel Line	Every two months (replace if necessary)					

5.3 - General Inspection

1. Look for fuel leaks around the fuel tank, fuel hose, fuel valve and carburetor. Close the fuel valve and repair leaks immediately.
2. Look and listen for exhaust leaks while the engine is running. Have all the leaks repaired before continuing operation.
3. Check for dirt and debris and clean as necessary
4. Check the engine oil level and add oil as necessary.

Do not use gasoline or low flash point solvents for cleaning. They are flammable and could explode under certain conditions.

5.4 - Air Filter Service

Using gasoline or other flammable solvents can cause a fire or explosion. Do not operate this product without an air filter.

1. Rotate the knob counterclockwise to release.
2. Lift the air cover to remove from the air filter unit.
3. Remove the foam element. Refer to Fig. 5.0

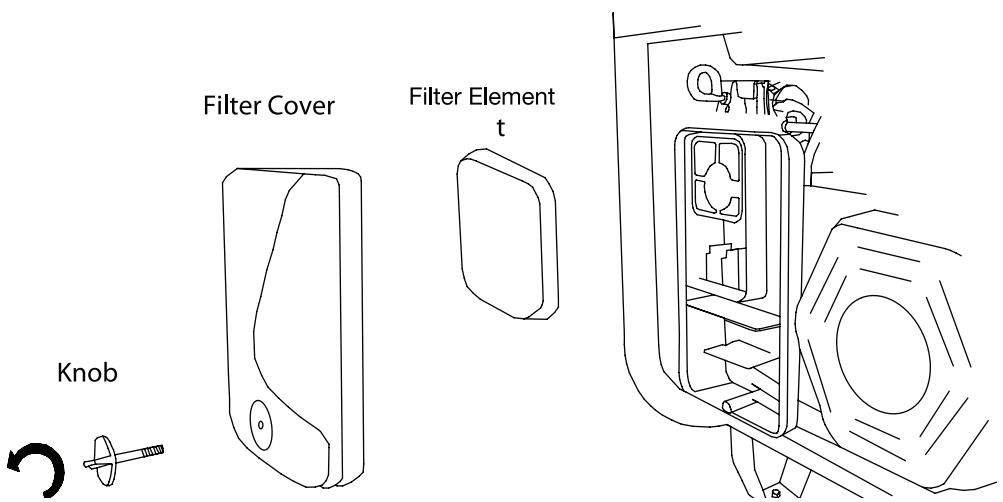

4. 4. If the foam element is dirty, clean it in warm soapy water, rinse, and allow it to dry thoroughly, or clean in non-flammable solvent and allow to dry.
5. Dip the foam element in clean engine oil, then squeeze out all excess oil. The engine will smoke when started if too much oil is left in the filter.
6. Wipe dirt from the air filter unit and cover using a moist rag. Refer to Fig.

5.5 - Oil Change and Oil Drainage

Used motor oil can cause skin irritations if left in long-tern contact with skin. Wash hands thoroughly with soap and water after handling oil.

Do not dispose of used oil in drains or on soil. Local service shops provide environmentally-friendly disposal methods.

1. Stop the engine and remove oil filler cap.
2. Place a pan under the engine.
3. Remove the oil drain screw and allow the oil to completely drain into the pan.
4. Reinstall drain screw before filling the engine with fresh oil. Do not overfill oil reservoir. Use a funnel to prevent spillage.
5. Reinstall the filler cap and tightly fasten it.

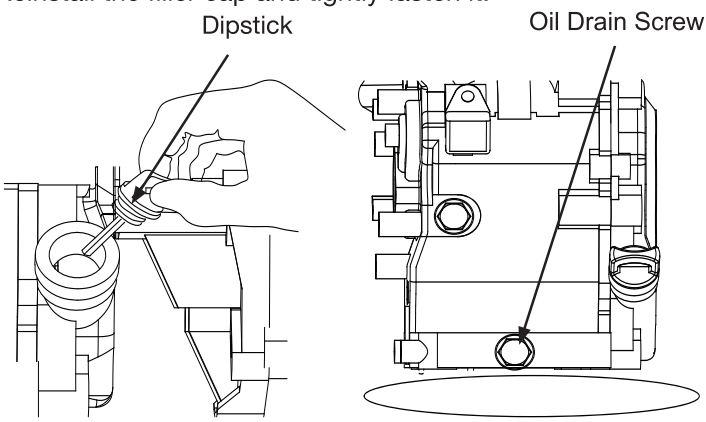

5.6 - Spark Plug Service

Do not rinse spark plug in water. Follow guidelines and be careful not to overtighten the spark plug.

Tighten ½ turn when installing a new spark plug.

Tighten ¼ turn when re-installing an old spark plug.

1. Disconnect and remove the spark plug using a wrench.
2. Inspect the spark plug and clean any dirt from the electrodes with a wire brush. If electrodes are worn or show signs of wear, replace spark plug.
3. Measure the electrode gap with a spark plug gauge and adjust as necessary by bending the side electrodes. Ensure that the gap is between 0.7 and 0.8mm
4. Reinsert the plug carefully. Tighten with a spark plug wrench.

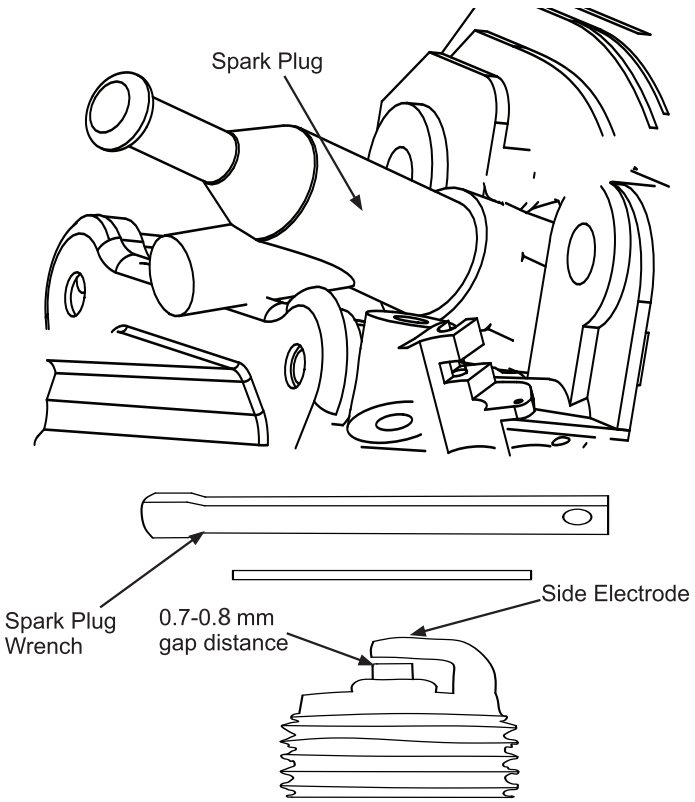

5.7 - Handling and Storage

HANDLING

1. Turn off the engine switch and the fuel valve when transporting the generator set.
2. Do not touch engine until the engine has cooled down.
3. Keep the generator at a level position in order to prevent spillage.

STORAGE:

Before storing the generator set for an extended period:

1. Ensure that the storage area is free of excess humidity and dust.
2. Drain the fuel tank and the carburetor.

DRAINING THE FUEL TANK

1. Turn the engine switch off.
2. Remove the fuel tank cap and the debris screen under the cap.
3. Empty the fuel tank using a siphon and an approved gasoline container.

DRAINING THE CARBURETOR

1. Turn the engine switch OFF.
2. Turn the fuel valve ON.
3. Position a suitable container under the carburetor drain screw to catch fuel; loosen the screw.
4. Allow fuel to drain completely into container. 5. Retighten drain screw.

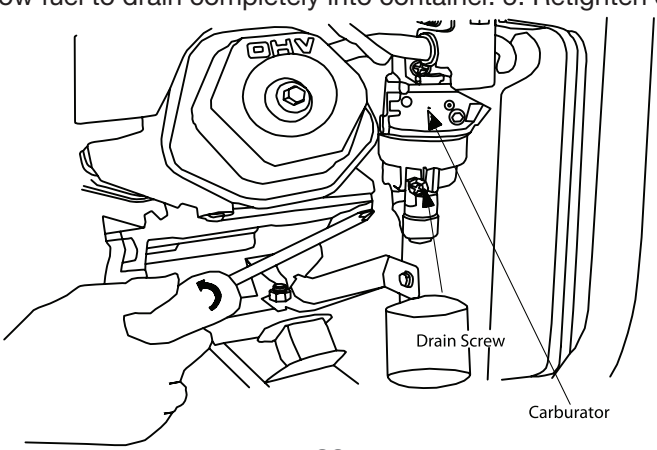

6.0 - TROUBLESHOOTING

Common issues can be fixed by following the instructions in this guide. If the unit will not function after following these instructions, contact technical support before attempting to use or repair the product.

ISSUE	CAUSE	ACTION
Engine cranks slowly	Engine oil is too heavy	Replace with recommended oil
	Load is connected	Disconnect load while starting
Engine is not starting	No fuel or LPG	Refill fuel tank
	Fuel valve is closed	Fully open fuel valve
	Fouled spark plug	Remove, clean or replace spark plug
	Not enough oil	Add more oil
Black exhaust	Choke stuck in closed position	Open choke
	Dirty air filter	Clean air filter
	Rich fuel mixture	Contact customer service
Engine stops	No fuel	Refill fuel tank
	Not enough oil	Add more oil
Engine has difficulty idling	Loose spark plug cable	Reconnect or repair cable
	Faulty spark plug	Remove, clean or replace spark plug
	Generator set not level	Move generator to a level surface
	Dirty fuel filter	Replace the filter
No AC Output	Tripped AC circuit breaker	Remove all loads, reset breaker and check loads for defects. Do not exceed generator rating.
No DC Output	Tripped DC circuit breaker	Disconnect battery, reset breaker and test battery for short circuit

7.0 - SPECIFICATIONS

		HCP3550
GENERATOR	Rated frequency (Hz)	60Hz
	Rated AC Output Power (W)	3000
	Max AC Output Power (W)	3500
	1-Phase Rated AC Voltage (V)	120/240V
	Power Factor	1.0
	Max DC Output Power (W)	100
ENGINE	Type	7 HP, Single Cylinder, forced air cooling, 4-stroke, OHV 25 deg tilt
	Displacement (cm^3)	208cc
	Ignition mode	Non-contact transistor
	Starting mode	Recoil Start
	Max. Output (W/rpm)	3800/3600
	Fuel tank capacity (Gal)	4.5
	Oil capacity	4.5 fl.oz. (10W30)
	Fuel Type	Unleaded gasoline
	Running Volume	86dB (at 7m)
	Running Time Per Tank (hours)	9hrs with 50% load
BOX	L x W x H	24 x 18 x 18.5 inches
	Dry Weight	115lbs

Allow engine to rest for 30 minutes before starting another running cycle.

8.0 - WIRING DIAGRAMS

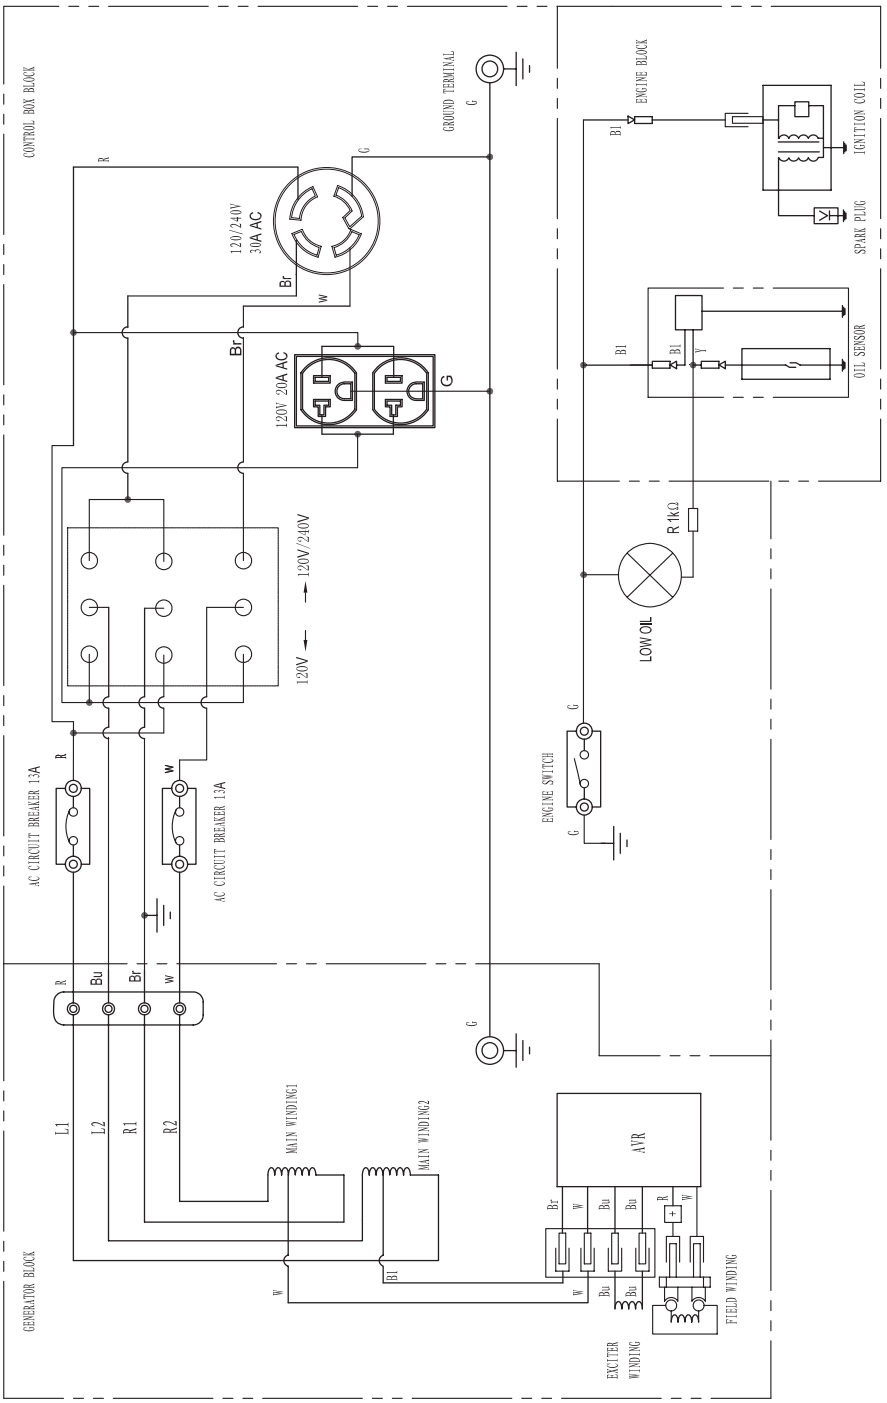

Warranty

Midland International U.S.A.
Hyundai Power Equipment Distribution
P.O. Box 1408
Columbia, MO 65203

This warranty is limited to the listed Hyundai Power Equipment products when distributed by Cobalt Power Inc.

These products are warranted to be free of defects in materials and workmanship from the original date of purchase according to the schedules defined in this warranty document. This limited warranty guarantees that any defective parts will be repaired or replaced, at the warrantor's discretion, at no cost, including diagnosis and replacement parts.

3 YEAR LIMITED WARRANTY:
The limited warranty coverage is continual from the initial date of purchase and does not restart at any time under any circumstances. This limited warranty is valid only when the equipment receives all necessary preventative maintenance, as described in the Hyundai User Manual. The repair or replacement will take place within a reasonable period of time during normal business hours.

LABOR WARRANTY CLAIM PROCEDURE:
The product must be purchased in the United States or Canada from Cobalt Power Inc., via an authorized channel of distribution. This limited warranty applies to the first purchaser and each subsequent registered owner during the applicable warranty time period.

What MIDLAND INTERNATIONAL INC. will Repair or Replace Under Limited Warranty:
MIDLAND INTERNATIONAL INC. will repair or replace, at its opinion, any part that is proven to be defective in material or workmanship under the normal use during the applicable warranty time period. Warranty repairs and replacements will be made without charge for parts, accessories, or labor during the first 12 months after original purchase. The remaining 24 months of warranty are parts only. Anything replaced under warranty becomes the property of MIDLAND INTERNATIONAL INC. All parts replaced under warranty will be considered as part of the original product, and any warranty on those parts will expire coincident with the original product warranty.

Warranty service must be performed by a Hyundai-authorized service dealer. If you feel your equipment is malfunctioning due to a defect, simply contact our customer support center for technical advice, to file a warranty claim or for general information.

BEFORE WARRANTY WORK CAN BEGIN

To obtain warranty service, contact our customer support center:

Toll Free: 1-877-528-3772

Email: support@hyundaipower.ca

Online: www.powerbyhyundai.com

LIMITATIONS OF REMEDIES AND DISCLAIMERS

THE FOREGOING LIMITED WARRANTY IS EXCLUSIVE OF AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED.

Midland International Inc. disclaims any responsibility for any indirect, incidental or consequential loss or damage caused by any defects in material or workmanship.

All expenses incurred in maintaining parts shall be incurred by the purchaser This warranty coverage does not include parts affected by accident and/or collision, corrosion or rust, normal wear, use in an application for which the product was not intended, service from an unauthorized service dealer, or any other misuse, neglect, incorporation or use of unsuitable attachments and/or parts. Under this warranty, the warrantor is not obligated to bear any transportation fees of any product to/from an authorized service dealer. Unauthorized alteration, installation, or any cause other than defects in material or workmanship of the product will not be covered under this warranty.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

NOT COVERED BY THIS LIMITED WARRANTY:

1. Normal wear and tear, such as but not limited to fading of painted or plated surfaces, sheet peeling and other natural deterioration.
2. Damage caused by a lack of maintenance as described in the Hyundai User Manual.
3. Consumable parts: Hyundai does not warrant deterioration of the following unless needed as a part for another warranted repair: Spark plugs, fuel filters, air cleaner elements, clutch discs, tires, wheel bearings, starter ropes, cables, belts, oil and grease.
4. Damage caused by accidental or improper installation or storage.
5. Exposure of the product to chemical agents, bird droppings, sea water, sea breeze or salt.
6. Improper repair or maintenance.
7. Damage caused by water ingestion, submersion, or external water damage except for HCP653 (Trash Pump) and HCP3000 (Pressure Washer).
8. Damage or non-performance caused by operation of the generators set in a marine application.
9. Operating methods other than those indicated in the owners manual.
10. Damage caused by operation with improper pressure, conditions, or modifications contrary to published specifications.

11. Items not supplied by Hyundai, such as, but not limited to, external wiring, filters, etc.
12. The use of non-genuine Hyundai parts and accessories.
13. Repairs made during the warranty period without first obtaining a case number form Hyundai.

PRODUCT REGISTRATIONS

Product registration is required for all product support and warranty coverage. The purchaser must also provide the original proof of purchase. The owner's registration, found with the user manual, must be completed and mailed. You can also register online at www.powerbyhyundai.com. You should keep your receipt or invoice as proof of purchase.

Product covered by warranty	Length of warranty from date of original purchase	
	LABOR	**PARTS**
Model No: HCP6500D, Diesel Power Generator	12 Months	36 Months
Model No: HCP9000, Dual-Fuel Generator	12 Months	36 Months
Model No: HCP9100, Gas-Powered Air Compressor	12 Months	36 Months
Model No: HCP3000, Gas-Powered Pressure Washer	12 Months	36 Months
Model No: HCP653, Gas-Powered Trash Pump	12 Months	36 Months
Model No: HCP6550, Diesel Power Generator	12 Months	36 Months
Model No: HCP3500, Gas-Powered Generator	12 Months	36 Months
Model No: HCP652, Gas-Powered Water Pump	12 Months	36 Months

ACCESSORIES AND REPLACEMENT PARTS

3 YEAR LIMITED PARTS AND ACCESSORIES WARRANTY

This limited warranty defines the accessories and replacement parts warranty and is limited to Hyundai Power Equipment products when distributed by Cobalt Power Inc.

The accessories and replacement parts must be purchased from COBALT POWER INC. in the United States or Canada. Parts and Accessories must be purchased for installation on original Hyundai equipment or engines to be eligible for warranty coverage. Installing parts and accessories on non-Hyundai products or engines voids the warranty.

Midland International Inc. will repair or replace, at its option, any Hyundai Power Equipment accessories or replacement parts that are proven to be defective in material or workmanship under normal use during the applicable warranty time period. Anything replaced under warranty becomes the property of Midland International Inc. All parts replaced under warranty will be considered as part of the original product, and any warranty on those parts will expire coincident with the original product warranty.

PARTS AND ACCESSORIES WARRANTY CLAIM PROCEDURE

Original accessories and replacement parts that are proven to be defective in material or workmanship under the normal use will be repaired or replaced under warranty without charge if determined to be defective within the first thirty-six months form the original date of purchase. After one year from the original date of purchase, labor costs will be the responsibility of the purchaser. If installed by anyone else, acces-

sories and replacement parts will be repaired or replaced under warranty without charge for parts, but any labor charges will be the responsibility of the purchaser.

EXCLUSIONS

The same exclusions listed above for labor apply to this warranty. This warranty does not extend to accessories, or parts, affected or damaged by collision, normal wear, use in an application for which the product was not designed or any other misuse, neglect, incorporation or use of unsuitable attachments or parts, unauthorized alteration, improper installation, or any causes other than defects in material or workmanship of the product. Installing non-Hyundai Parts and Accessories voids this warranty.

DISCLAIMER OF CONSEQUENTIAL DAMAGE AND LIMITATION OF IMPLIED WARRANTIES:

MIDLAND INTERNATIONAL INC. disclaims any responsibility for loss of time or use of the product, or the power equipment on which the product is installed, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this written warranty. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

TO OBTAIN WARRANTY SERVICE FOR PARTS OR ACCESSORIES:

You must, at your expense, take the Hyundai Power Equipment accessory, or replacement part, or the Hyundai Power Equipment product on which the accessory or replacement part is installed, and proof of purchase to any authorized Hyundai Power Equipment dealer, distributor or distributor's dealer in the United States or Canada during the dealer's or distributor's normal business hours. If you are unable to obtain warranty service or are dissatisfied with the warranty service you receive, take the following steps:

First, contact the owner of the service location involved; normally this will resolve the problem. Second, if the issue is not resolved, contact:

Hyundai Power Equipment Customer Support Center
Toll Free: 1-877-528-3772
E-mail: support@hyundaipower.ca
Online: www.powerbyhyundai.com

HYUNDAI
POWER EQUIPMENT

COMMERCIAL
series

Warranty Registration

Ownership must be registered with Hyundai Power Equipment in order to ensure continued warranty and service support. Please fill out the registration card below and mail it along with a copy of your receipt, and the original UPC barcode from your product packaging. The store, date of purchase and product purchase should be clearly visible on the receipt copy.

Mail completed form to:
Midland International U.S.A.
Product Registration
P.O. Box 1408
Columbia, MO 65203

You may also register online by visiting our website:
www.powerbyhyundai.com

If you wish, you can confirm your registration by calling customer service at or by email at support@hyundaipower.ca. Please allow one week for mail delivery and processing.

Owner Information

First Name _____ Last Name _____ Company _____

Street Name and Number _____ City _____

Zip Code _____ State _____ Phone Number _____

Other Contact Number _____ Fax Number _____ Email _____

Product Information

The serial number can be found on the Owners Card, on the packaging or near the motor housing.

Model Name _____

Serial Number | | | | | | | – | | | | | | |

Initial Date of Purchase YYYY / MM / DD

Warranty Expiration YYYY / MM / DD
Add 3 years to initial date of purchase

Date of Transfer YYYY / MM / DD

HYUNDAI
POWER EQUIPMENT

COMMERCIAL
series

Transfer of Ownership and Warranty

Changes in ownership must be registered with Hyundai Power Equipment in order to ensure continued warranty and service support.

Warranty support cannot be provided without registration (from original date of purchase and after transfer of ownership)

Mail completed form to:
Midland International U.S.A.
Product Registration
P.O. Box 1408
Columbia, MO 65203

This transfer form must be completed on or before the date that ownership change takes effect. Warranty coverage continues from original date of purchase and is not extended by transfer of ownership.

Existing Owner Information

First Name | Last Name | Company

Street Name and Number | City

Zip Code | State | Phone Number

Other Contact Number | Fax Number | Email

New Owner Information

First Name | Last Name | Company

Street Name and Number | City

Zip Code | State | Phone Number

Other Contact Number | Fax Number | Email

Product Information

The serial number can be found on the Owners Card, on the packaging or near the motor housing.

Model Name

Serial Number

Initial Date of Purchase (YYYY / MM / DD)

Warranty Expiration (YYYY / MM / DD)
Add 3 years to initial date of purchase

Date of Transfer (YYYY / MM / DD)

NOTE: Transfer of ownership does not act as a warranty extension. The original 3-Year Warranty is effective as of the Initial Date of Purchase and continues after ownership has transfered. New owners should be made aware of expired or remaining coverage.